

# ACCUVALVE® MODEL AVT4000 SUBMITTAL

## MODEL CODE

**⚠ WARNING: NOT FOR USE WITH PERCHLORIC ACID**

AVT4     -          

### VALVE MATERIAL

(Housing / End Plate & Blades)

- 2 = 304SS / 304SS
- 3 = 316SS / 316SS
- 4 = ALUMINUM / 304SS

### OPTIONS

- BLANK = NO OPTIONS
- B = BACnet MS/TP
- F = FLANGES (REF NOTES 2 & 3)
- I = INSULATION (REF NOTE 4)
- S = TIGHT SHUT-OFF (REF NOTE 1)
- W = WIRELESS BLUETOOTH

### ACTUATOR

- 07 = FAIL LAST POSITION (FLP), 21 SEC
- 17 = FAIL LAST POSITION (FLP), 10 SEC

### SIZE

- 06 = 06" DIAMETER
- 08 = 08" DIAMETER
- 10 = 10" DIAMETER
- 12 = 12" DIAMETER
- 14 = 14" DIAMETER
- 18 = 12"x18" RECTANGULAR
- 24 = 12"x24" RECTANGULAR

### MODEL CODE NOTES:

- 1) Blade seals are standard on all 6" valves, therefore -S option is not available for valve size -06.
- 2) Reference the Flange Detail - Vanstone submittal drawing for round flanges
- 3) Reference the Flange Detail - Rectangular submittal drawing for rectangular flanges
- 4) Reference the Insulation detail submittal drawing

## MATERIALS

Materials Exposed to the Airstream			
Valve Material Code	(2) 304SS	(3) 316SS	(4) Aluminum
Housing	304L SS (20 GA.)	316L SS (20 GA.)	Alum 5052-H32 (18 GA.)
Compression Section	304L SS (20 GA.)	316L SS (20 GA.)	Alum 5052-H32 (16 GA.)
Static Regain Section	304L SS (20 GA.)	316L SS (20 GA.)	Alum 5052-H32 (18 GA.)
End Plate	304L SS (16 GA.)	316L SS (16 GA.)	304L SS (16 GA.)
Blades	304L SS (16 GA.)	316L SS (16 GA.)	304L SS (16 GA.)
Shafts	316L SS	316L SS	316L SS
Shaft Bearings	Teflon	Teflon	Teflon
Vortex Sensors	Polycarbonate Plastic, UL94-V0	Polycarbonate Plastic, UL94-V0	Polycarbonate Plastic, UL94-V0
Sensor Tubing	Polyurethane (Ether-based)	Polyurethane (Ether-based)	Polyurethane (Ether-based)
Compression Seals	EPDM Rubber	EPDM Rubber	EPDM Rubber
Machine Screws	304 SS	316 SS	304 SS
Rivets	304 SS	316 SS	304 SS
Blade Seals (optional)	EPDM Rubber	EPDM Rubber	EPDM Rubber

## OPERATING RANGE

Valve Model	Min. Flow Measured			Full Scale Range		
	CFM	L/S	CMH	CFM	L/S	CMH
<b>AVT4X06-XX</b>	30	14	51	315	149	535
<b>AVT4X08-XX</b>	80	38	136	800	378	1359
<b>AVT4X10-XX</b>	120	57	204	1300	613	2209
<b>AVT4X12-XX</b>	180	85	306	1790	845	3041
<b>AVT4X14-XX</b>	250	118	425	2750	1298	4672
<b>AVT4X18-XX</b>	260	123	442	3200	1510	5437
<b>AVT4X24-XX</b>	350	165	595	4000	1888	6796

### Temperature Range

Valve Material	Airstream		Ambient	
	Min. Temp.	Max. Temp.	Min. Temp.	Max. Temp.
<b>2, 3, 4</b>	-20° F (-29° C)	165° F (74° C)	-20° F (-29° C)	125° F (52° C)

## SIZE AND WEIGHT

Valve Model	Valve Dimensions (Reference Sheet 2)						Weight					
	"D" or "W"		"L" (Note 1)		"H"		Stainless Steel		Aluminum		Flange Add	
	in.	mm	in.	mm	in.	mm	Lbs.	kg	Lbs.	kg	Lbs.	kg
<b>AVT4X06-XX</b>	5.88	149	22	559	10	254	13	5.9	9	4.1	2.0	0.9
<b>AVT4X08-XX</b>	7.88	200	24	610	12	305	16	7.3	12	5.4	2.6	1.2
<b>AVT4X10-XX</b>	9.88	250	24	610	14	356	20	9.1	14	6.4	3.2	1.5
<b>AVT4X12-XX</b>	11.88	300	27	686	16	406	26	11.8	16	7.3	4.5	2.0
<b>AVT4X14-XX</b>	13.88	350	30	762	18	457	30	13.6	20	9.1	5.2	2.4
<b>AVT4X18-XX</b>	17.88	454	30	762	17	432	43	19.5	26	11.8	5.0	2.3
<b>AVT4X24-XX</b>	23.88	607	30	762	17	432	49	22.2	29	13.2	5.5	2.5

### SIZE AND WEIGHT NOTES:

- 1) Round valves with optional flanges "L" is 1/2" (13mm) less than standard valves



Accutrol Representative:

## SUBMITTAL DRAWING

**AccuValve® Model AVT4000**

THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.  
THIS DOCUMENT OR THE CONTENTS THEREOF SHALL NOT BE MODIFIED WITHOUT PRIOR WRITTEN PERMISSION BY ACCUTROL LLC.


DWG. NO: AVT4000 SUBMITTAL DWG

REVISION: H      ECN: 3192

REV. DATE: 4-9-26      SHEET: 1 OF: 5


## ROUND VALVE

AVT4X06-XX  
 AVT4X08-XX  
 AVT4X10-XX  
 AVT4X12-XX  
 AVT4X14-XX

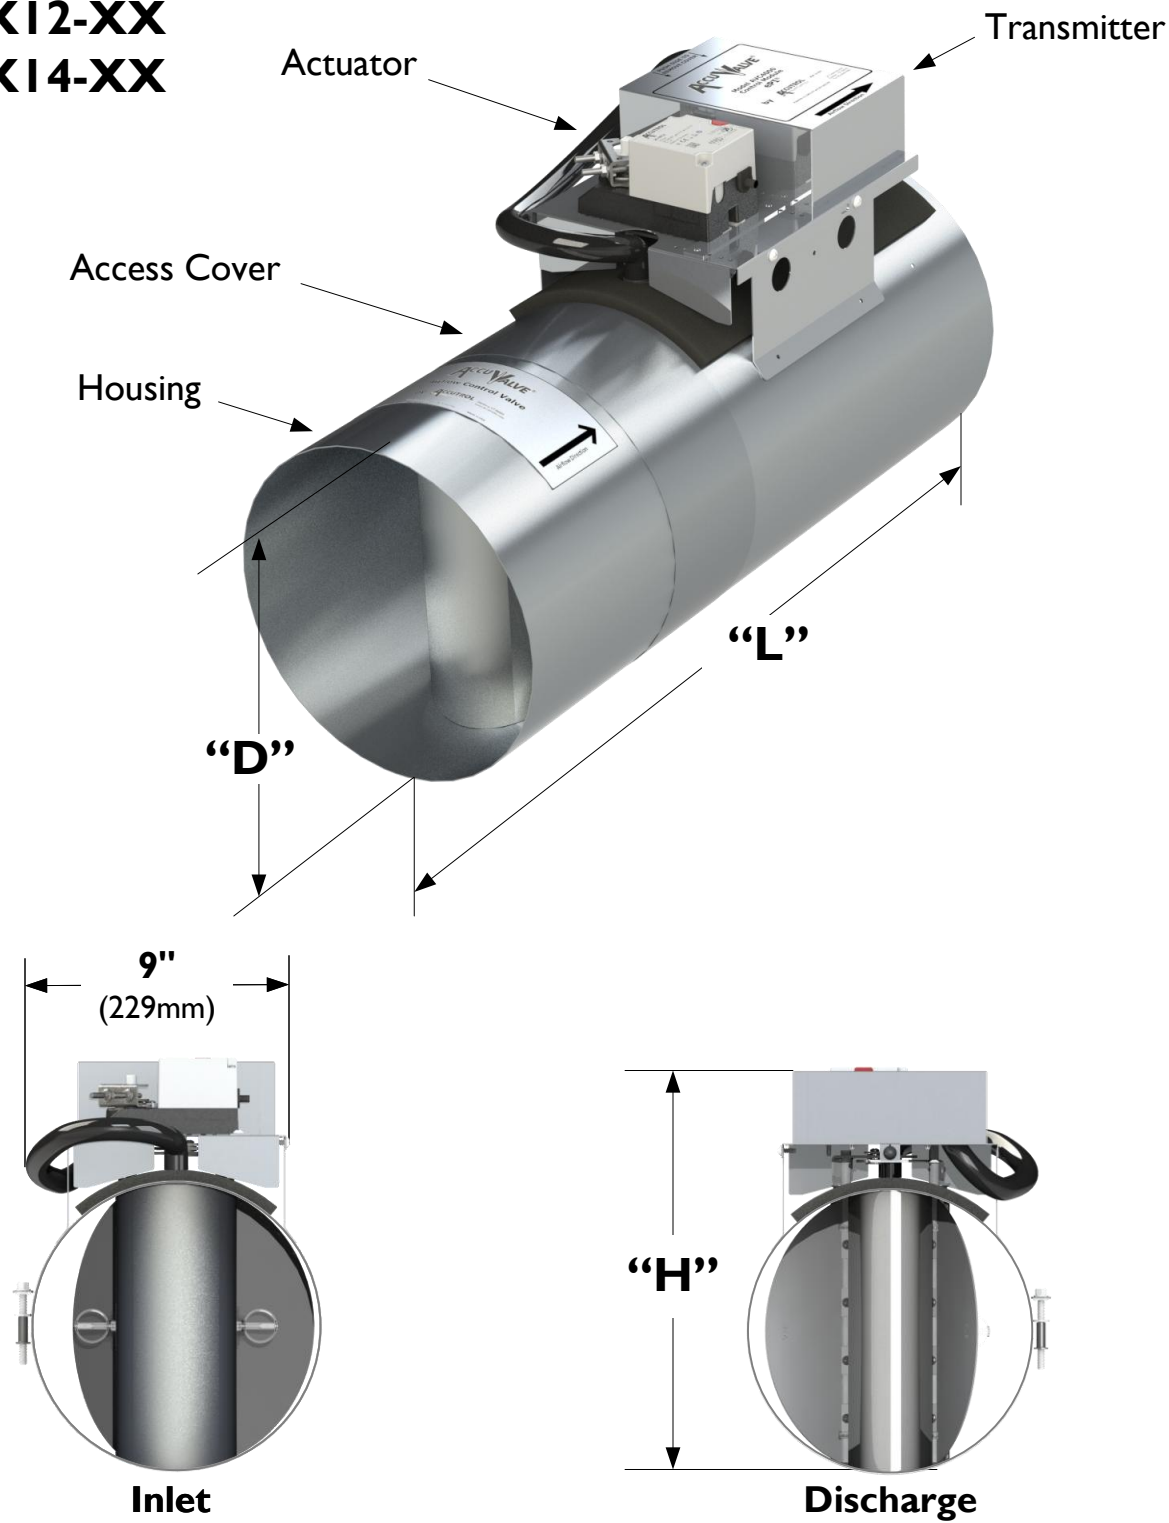

## RECTANGULAR VALVE

AVT4X18-XX  
 AVT4X24-XX

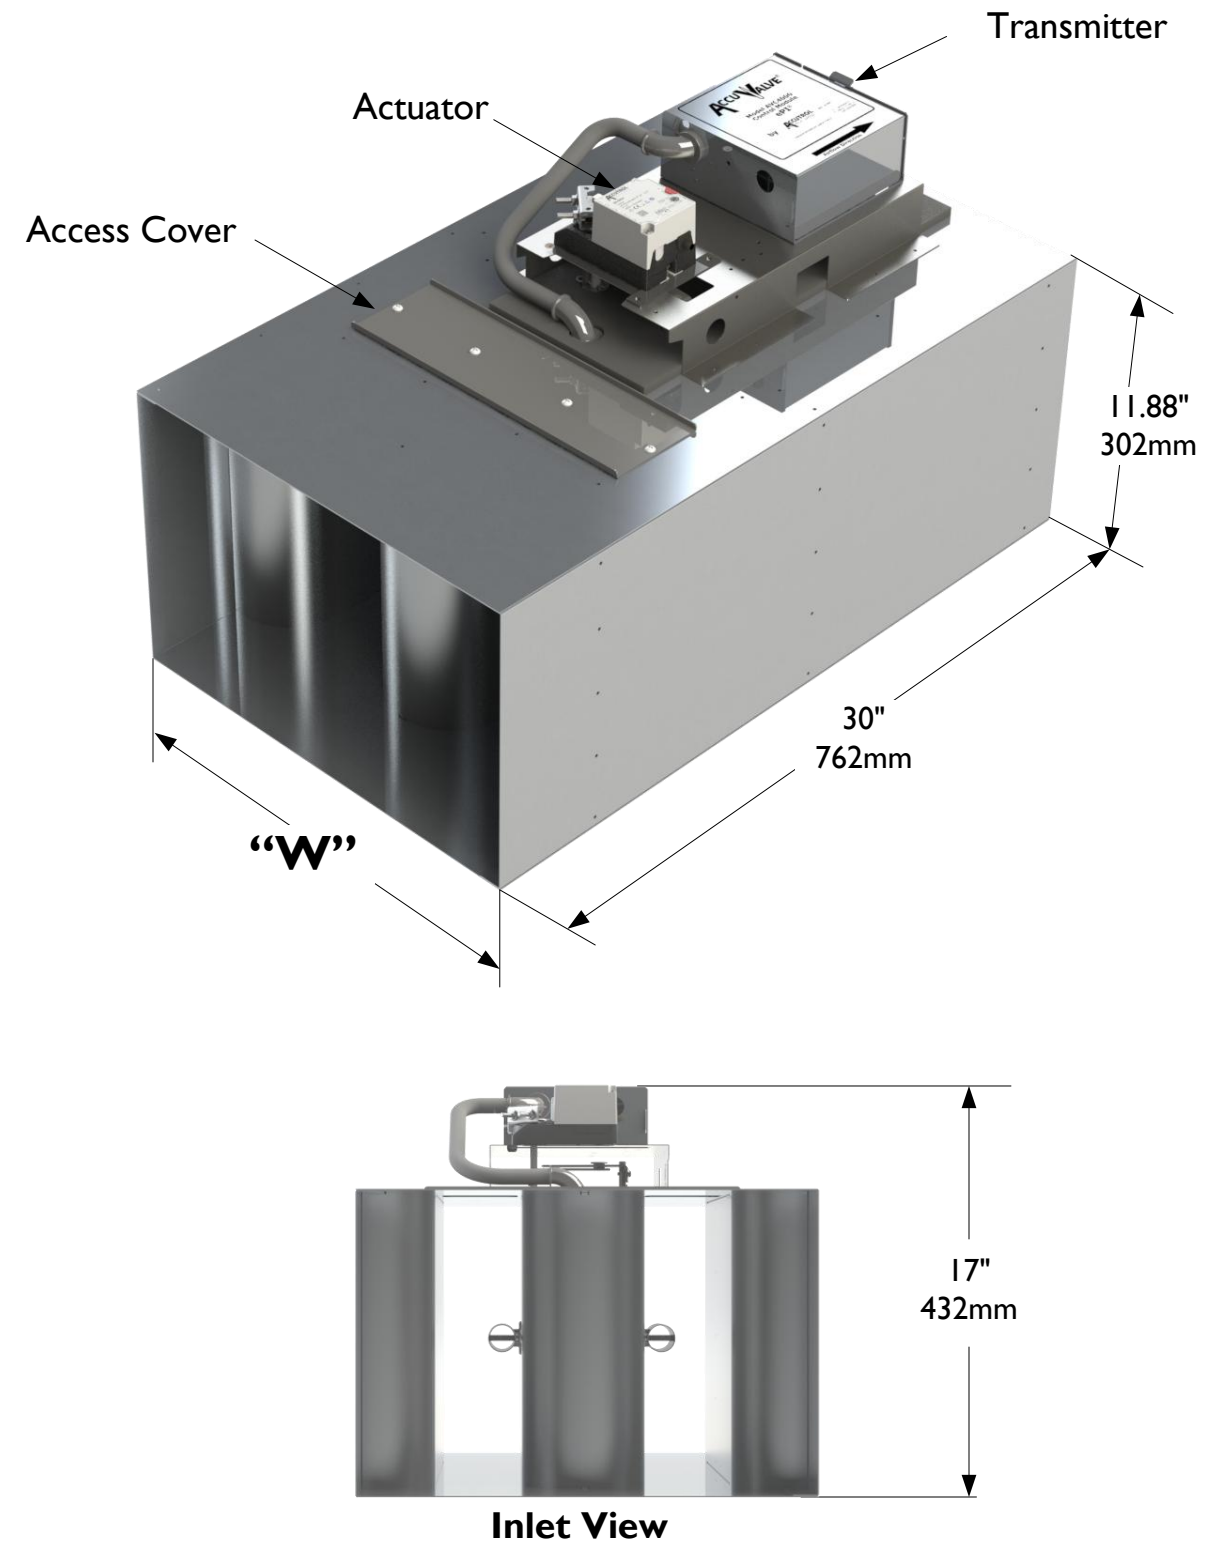

DWG. NO:	AVT4000 SUBMITTAL DWG		
REVISION:	H	ECN:	3192
REV. DATE:	4-9-26	SHEET:	2 OF: 5

# ROUND VALVE: INSTALLATION INSTRUCTIONS

**⚠ WARNING:** Wear eye protection, protective gloves and clothing suitable for working with sheet metal which may have sharp edges.

1. Read all instructions prior to beginning installation.

**NOTE:** For detailed installation instructions, refer to the AccuValve® Installation & Operation Manual.

2. Verify the tag number located on the valve label matches the HVAC schedule, when applicable.

3. Locate the duct section which the valve is servicing and select a suitable mounting location for the valve.

**NOTES:** The AccuValve® does not require straight inlet duct runs to operate properly, however it's always best to locate the valve away from transitions and bends to minimize impact on system static pressure. Be sure to select a location that will provide a minimum clearance of 14 inches (356 mm) unobstructed access to the transmitter, actuator and valve access cover. The AccuValve® is not position sensitive. It can be installed in any plane or rotational axis without having impact on the performance.

4. Provide an opening in the selected duct section sized appropriately for the valve being installed.

**NOTE:** A slip-fit valve will require an opening approximately 2" (50.8 mm) smaller than the valve length, whereas a flanged valve will require an opening the same length as the valve. Reference Sheet 1 and 2 for valve dimensions.

5. Install duct hangers within 12 inches (305 mm) from each end of the valve. Reference Sheet 1 for valve weights.


**⚠ WARNING:** Use duct hangers and hardware designed to support the total load of valve and associated duct sections. Failure to do so may result in serious personal injury or death.

6. Install the valve into the duct in accordance with the airflow direction label located on the valve. Position the valve for easy access to the transmitter side then secure to duct per the appropriate figure below.

**NOTE:** Screws, nuts, fasteners, duct sealant, hangers, and gaskets are not provided by Accutrol LLC.

## Standard Slip-fit Valve Secured Using Tek Screws

Seal joints using duct sealant and secure valve to duct at both ends using Tek screws.

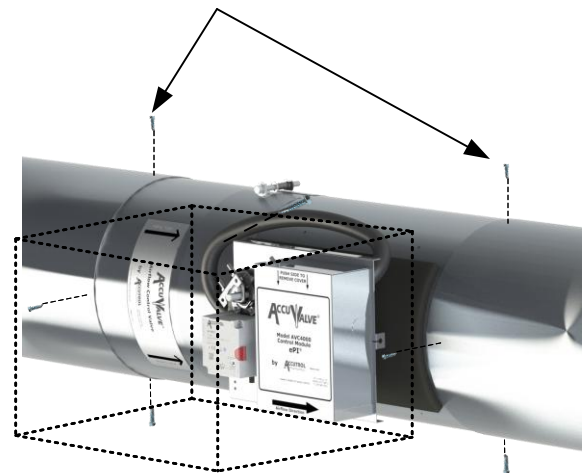


14" (356mm)  
Keep-Out Zone

**Figure 1**

## Standard Slip-fit Valve Secured Using Draw Bands

(Draw Bands are Sold Separately)

After sealing joints with appropriate type of tape, secure both ends using draw band clamps.

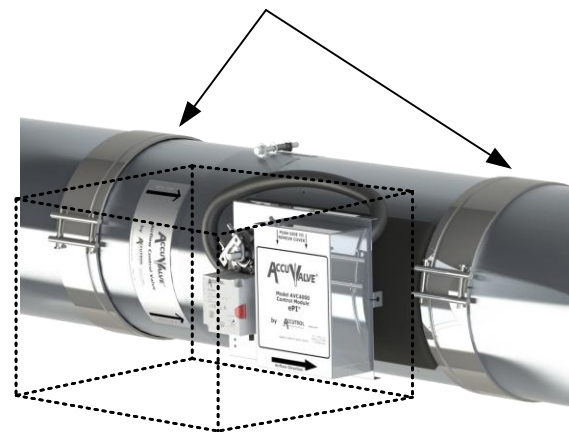


14" (356mm)  
Keep-Out Zone

**Figure 2**

## Flanged Valve "Option F" Secured Using Companion Flanges

(Companion Flanges are Sold Separately)

Install companion flanges to duct ends and secure to duct. Apply duct sealant and/or gasket to flange face. Install valve and rotate VanStone flanges to align with bolt holes on the duct flanges. Secure flanges using appropriate hardware.

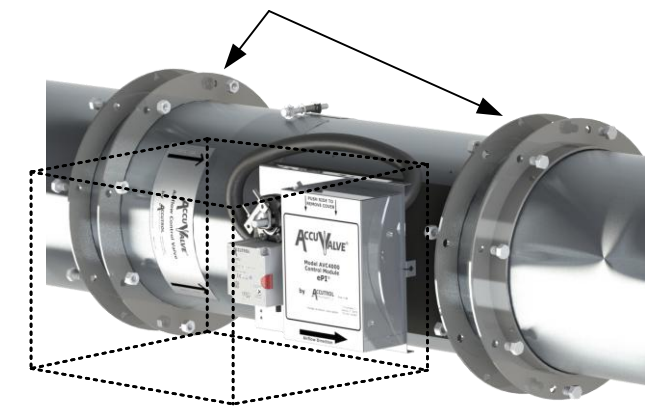

14" (356mm)  
Keep-Out Zone

**Figure 3**

Reference Accutrol Draw Band Clamp Submittal Drawing for Details

Reference Accutrol VanStone Flange Submittal Drawing for Details



Accutrol Representative:

## SUBMITTAL DRAWING

**AccuValve® Model AVT4000**

THIS DOCUMENT IS SUBJECT TO  
CHANGE WITHOUT NOTICE.  
THIS DOCUMENT OR THE CONTENTS  
THEREOF SHALL NOT BE MODIFIED  
WITHOUT PRIOR WRITTEN PERMISSION  
BY ACCUTROL LLC.

DWG. NO:	AVT4000 SUBMITTAL DWG		
REVISION:	H	ECN:	3192
REV. DATE:	4-9-26	SHEET:	3 OF: 5

# RECTANGULAR VALVE: INSTALLATION INSTRUCTIONS

1. Read all instructions completely before installing the valve.

**WARNING:** Wear eye protection, protective gloves and clothing suitable for working with sheet metal which may have sharp edges.

2. Verify the tag number located on the valve label matches the HVAC schedule when applicable.

3. Select optimum mounting location for the valve.

**NOTE:** The AccuValve® does not require straight inlet duct runs to operate properly, however it's always best to locate any duct device away from transitions and bends to minimize impact on system static pressure.

4. Allow a minimum clearance of 14 inches (356 mm) unobstructed access to the controller, actuator and valve access cover.

**NOTE:** Rectangular valves are normally installed with the "access side" facing downwards for easy access. However, the AccuValve® is not position sensitive. It can be installed in any plane or rotational axis without having impact on the performance.

5. To support the weight of the valve, install duct hangers within 12 inches (305 mm) of valve connections. Reference Sheet 1 for valve weights.

**CAUTION:** Do not install duct hangers directly on valve. Doing so may cause mechanical damage, misalignment, or interference with internal components.

**WARNING:** Use duct hangers and hardware designed to support the total load of the valve and associated duct sections. Failure to do so may result in serious personal injury or death.

6. After the duct section is properly supported to carry the weight of the valve, install valve into the duct in accordance with the Airflow Direction Label located on the valve. Position valve so the controller, actuator and access cover are easily accessible.


7. Reference the appropriate diagram to the right for installation details.

**NOTE:** Screws, nuts, fasteners, duct sealant, hangers, companion flanges and gaskets are not provided by Accutrol LLC.


# RECTANGULAR VALVE: INSTALLATION DIAGRAMS

**Figure 1**

Standard Slip-fit Valve Using Tek Screws

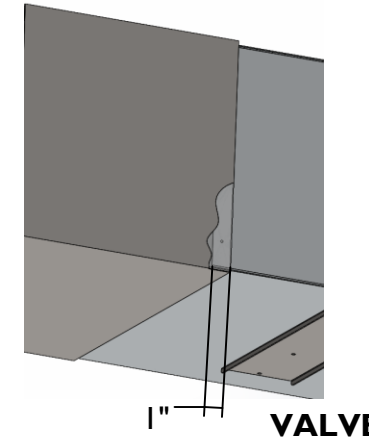


For slip-fit applications valve must be inserted at least 1" into ductwork to cover open holes on valve housing.

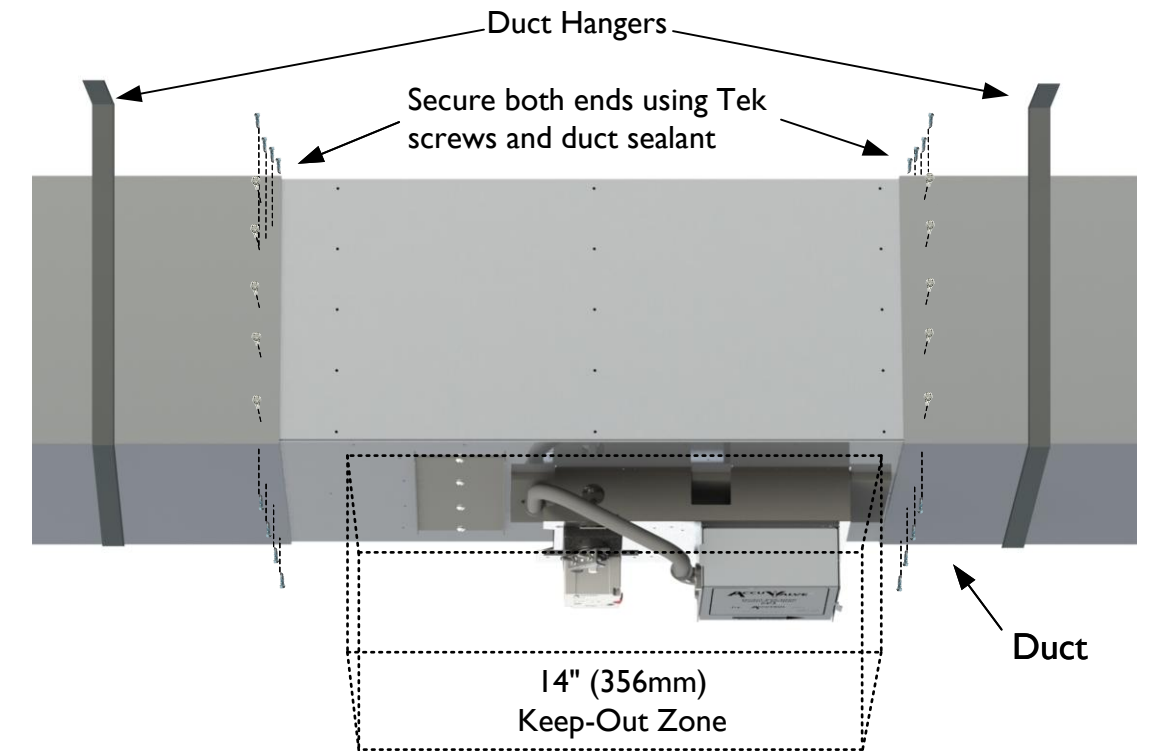

**Figure 2**  
Flanged Valve "Option F" Using Companion Flanges (Provided by Others)


Reference Rectangular AccuValve Flange Detail Submittal DWG

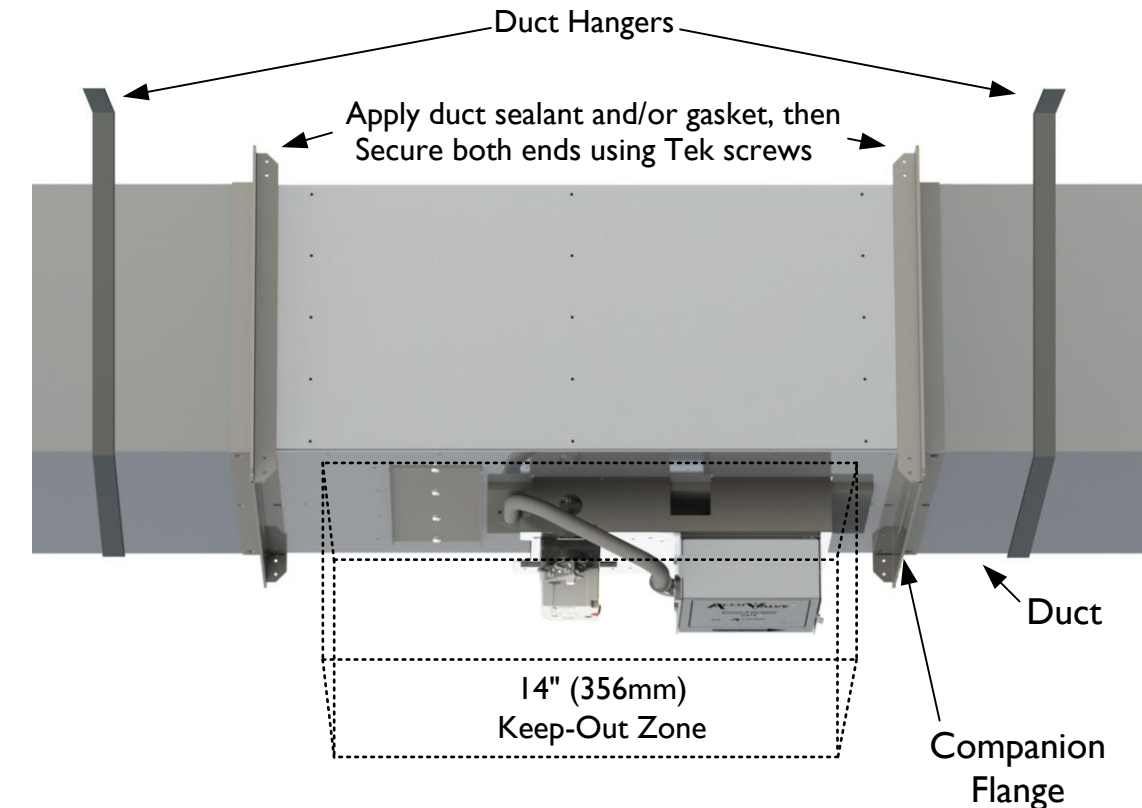

DWG. NO:	AVT4000 SUBMITTAL DWG		
REVISION:	H	ECN:	3192
REV. DATE:	4-9-26	SHEET:	4 OF 5

# WIRING SPECIFICATIONS

NOTE: Connections will vary based on application. For detailed wiring instructions, use this drawing in conjunction with the job-specific wiring diagrams.

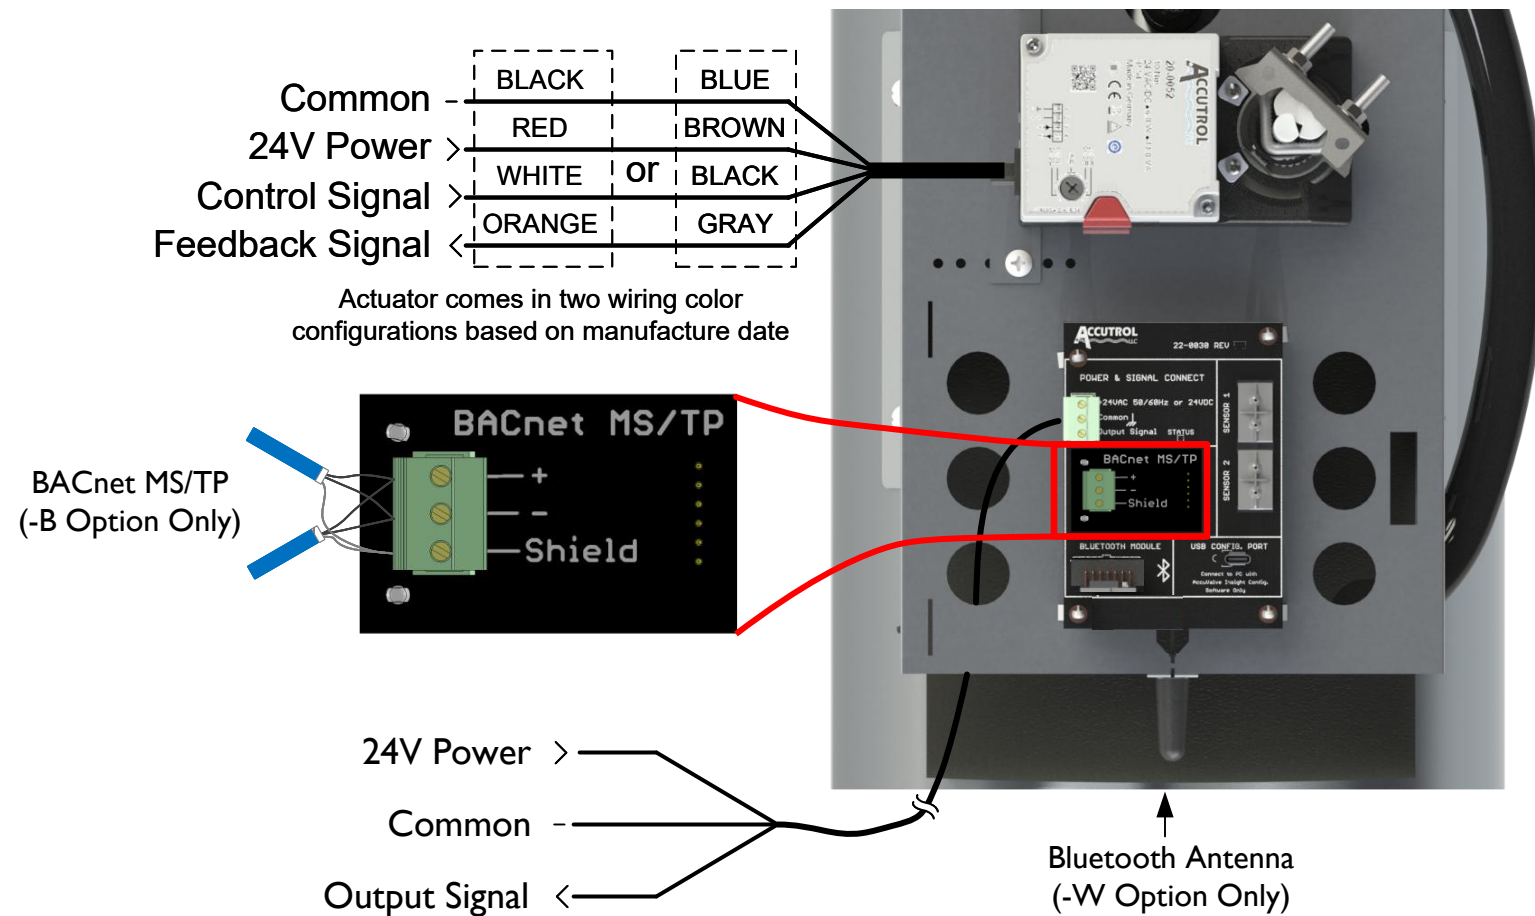

## Transmitter and Actuator

Connect the power and signal wires to the actuator and transmitter per the diagram. For more details on the actuator, reference the appropriate actuator submittal drawing listed in the table below.

**CAUTION:** Maintain polarity if the power source is used to power multiple devices otherwise equipment may be damaged.

**CAUTION:** Do not use the transmitter enclosure as a junction box. The only wires entering the transmitter enclosure shall be wires connected to the transmitter otherwise equipment may be damaged.

### Optional BACnet MS/TP Module

Connect the 2-wire EIA 485 BACnet MS/TP bus to the AVT4000 transmitter per the diagram. Network bias and EOL termination are not provided by the AVT4000.

### Optional Wireless Bluetooth Module

Reference Wireless Bluetooth Field Manual.

**WARNING:** During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. This work shall be performed by a licensed electrician or qualified individual who has been properly trained in handling live electrical equipment. Failure to follow all electrical safety precautions when exposed to live electrical components may result in serious injury or death.

## TRANSMITTER ELECTRICAL SPECIFICATIONS

Power Supply: 24 VAC +/- 20% 50/60 Hz, 6 VA max  
 24 VDC +/- 10% 3 W max

Output Signal: 0-20mA, 4-20mA, 0-10V, 2-10V, 0-5V, or 1-5V (Software Config.)  
 12-bit Resolution  
 Capable of driving 1K-ohm load

Configuration: USB Type C Connector, Wireless Bluetooth (Optional)

BACnet MS/TP (Optional): EIA 485 2-wire BACnet MS/TP, Galvanically Isolated  
 Baud Rates 9600, 19200, 38400, 57600, 76800 and 115200  
 1/8 Unit Load Receiver Input Impedance

Network bias and EOL termination not provided within the transmitter.

Terminal Plugs: 3-position, vertical pluggable, screw on top, Wire size range: 12-30 AWG

Note: Consult local electrical building codes to determine wire size required for application.

## ACTUATOR ELECTRICAL SPECIFICATIONS

"-07 Actuator" (For complete actuator specifications, reference actuator drawing 20-0057)

Power Supply: 24 VAC/DC, 6VA/4W

Control Signal: 2-10V

"-17 Actuator" (For complete actuator specifications, reference actuator drawing 20-0052)

Power Supply: 24 VAC/DC, 11VA/6W

Control Signal: 0-10V or 2-10V (Switch Selectable)