
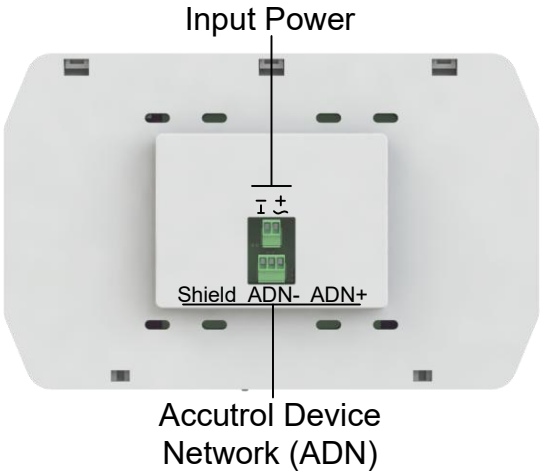


MODEL CODE

ICM

DISPLAY TYPE
1 = 7" Touch Screen

DIMENSIONS

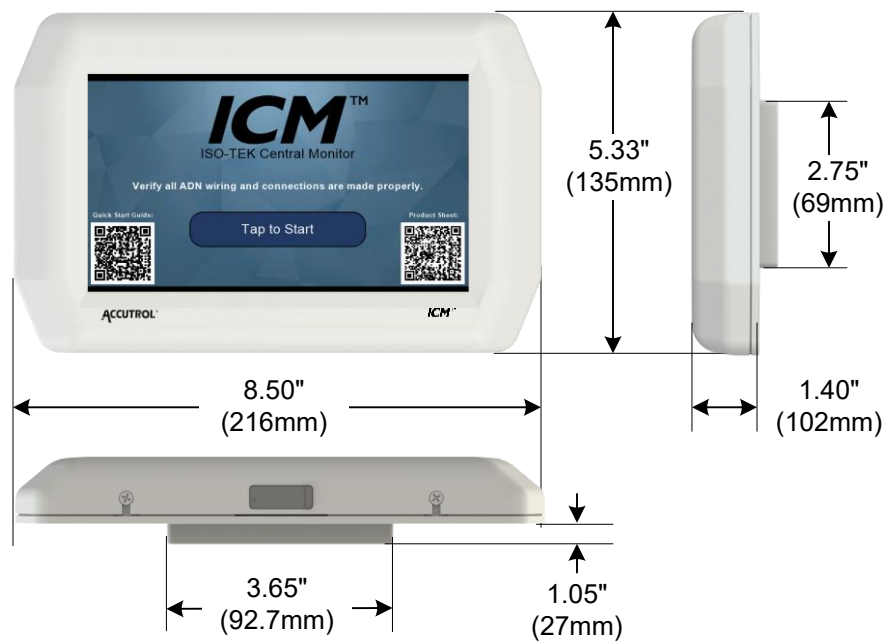

INSTALLATION

The ICM is designed to be installed onto a standard double or triple-gang electrical box provided by others. The ICM is typically located at a nurses station or an area central to the rooms which are being monitored.

- Step 1:** Install the electrical box level and flush with finished mounting surface.
- Step 2:** Insert power and Accutrol Device Network cables from e-box through the hole located in the Mounting Plate.
- Step 3:** Position the Mounting Plate with the arrow UP and secure to e-box using the (4) #6-32 x 1" screws provided.
- CAUTION:** Do not overtighten mounting screws. Overtightening may deform mounting plate .
- Step 4:** Align the notches in the top of ICM with the slots in the top of the Mounting Plate.
- Step 5:** Tighten the (2) screws located at the bottom of the ICM to secure the Bezel to the Backplate.



NOTE: Do Not Remove the 2 Screws Located at Bottom of ICM.



SPECIFICATIONS

Input Power	24VAC +/- 20%, 5.25VA, 50-60Hz or 24 VDC +/- 10% 3.5W
Connections	Input Power: 2-pos pluggable terminal, 14-30AWG range Accutrol Device Network (ADN): 3-pos pluggable terminal, 14-30AWG range USB 2.0, Isolated, Type C Conn., used for firmware upgrade only
Display	7" with active area 6.49" x 3.937" (164.9mm x 100mm) LCD-TFT Resistive touch display with LED backlight RGB 65K colors, 800 x 480 resolution
Speaker	Audible notifications, 550~18KHz, 83dBA SPL @ 1W/0.5M
Operating Temp Range	-4 to 150 deg F (-20 to 65 deg C)
Storage Temp Range	-40 to 185 deg F (-40 to 85 deg C)
Humidity	10 to 90% noncondensing
Accutrol Device Network (ADN)	Up to 8 Iso-Tek IO Modules can be connected to 1 ICM via ADN ICM EOL termination set via touchscreen Iso-Tek EOL termination set via jumper on Iso-Tek IO Module
Compliance	ABS Plastic UL94-VO, RoHS Compliant, CE

WIRING

