

Quick Start Guide




Room Temp Sensors with DISPLAY

For RTS110

 **Please read this entire document to familiarize yourself with the installation and wiring instructions for the RTS110**

The **RTS110** is a wall mounted Room Temperature Sensor with Display, that can be ordered with options for Set Point Adjustment, Occupancy Switch or an Ethernet connection.

- **Room Temperature Sensor** (all units): The sensor on this unit is a Type II thermistor (10K Ohm @ 77° F (25° C).
- **Set Point Adjustment Option:** The set point slider option is a 0 to 10K Ohm potentiometer and labeled Cool / Warm on the housing. The input on your controller can be scaled and limited to the range of temperature adjustment per your requirements.
- **Occupancy Switch Option:** The occupancy switch provides a momentary contact closure as a signal to an external controller to initiate a sequence of operation. This switch can be configured in parallel with the sensor, set point, or as a separate momentary or latching contact output.
- **Ethernet Connection Option:** This is a RJ45 connection under the front cover that can be wired with CAT5 communication wire to a remote mounted controller, allowing the technician to access the controller remotely.

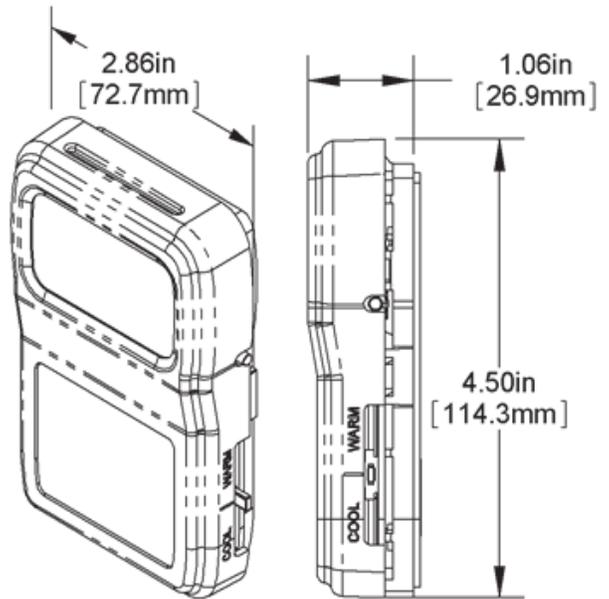

JUNCTION BOX MOUNTING

1. Pull the wire through the wall and out of the junction box, leaving about six inches free.
2. Pull the wire through the hole in the base plate.
3. Connect the Ethernet cable to the RJ45 connector (if required).
4. Secure the base to the box using the #6-32 x 1/2 inch mounting screw provided.
5. Terminate the unit according to the guidelines in the **Termination** section.
6. Attach Cover by latching it to the top of the base, rotating the cover down and snapping it into place.
7. Secure the cover by backing out the lock-down screws using a 1/16" Allen wrench until they are flush with the bottom of the cover.

DRYWALL MOUNTING

1. Place the base plate against the wall where you want to mount the sensor.
2. Using a pencil, mark out the two mounting holes and the area where the wires will come through the wall.
3. Drill two 3/16" holes in the center of each marked mounting hole. Insert a drywall anchor into each hole.
4. Drill one 1/2" hole in the middle of the marked wiring area.
5. Pull the wire through the wall and out of the 1/2" hole, leaving about six inches free.
6. Pull the wire through the hole in the base plate.
7. Secure the base to the drywall anchors using the #6 x 1 inch mounting screws provided.
8. Terminate the unit according to the guidelines in the following section
9. Attach Cover by latching it to the top of the base, rotating the cover down and snapping it into place.
10. Secure the cover by backing out the lock-down screws using a 1/16" Allen wrench until they are flush with the bottom of the cover.

Display, Set Point and Override Descriptions

NUMERICAL DISPLAY:

The default display shows current temperature. When the slider set point is moved enough to change the set point by 0.5 degrees, the set point will be displayed for 3 to 4 seconds. The unit can also be set up to display set point only or for set point lockout.

OCCUPIED ICON:

The Icon shows the status of the room Solid for "Occupied", Hollow for "Unoccupied".

Note: The unit must receive a confirmation (ground) signal on the "EXT OVR" terminal for the Icon to remain visible on the screen.

Pressing the Override button will light the Icon; however, if no confirmation signal is received, then the Icon will go blank (disappear after 5 seconds).



Upon receiving a first confirmation (ground) signal on the "EXT OVR" terminal, the Icon will show occupied (Solid). The Icon will then show unoccupied (Hollow) whenever the confirmation signal is removed and occupied when the signal is returned. The only way to blank the Icon from the display is to cycle power.

SET POINT:

When the slide set point is moved enough to change the set point by 0.5 degrees, the set point will be displayed. Slide the set point adjuster up or down to the desired set point is shown on the display.

OVERRIDE:

When the override button is pressed, the override output of the RTS 110 will shunt or short momentarily. This override output is connected to its associated controller which requires latching logic to initiate an alternate sequence of operation and should include driving a contact closure wired to the "EXT OVR" input of the RTS 110 to maintain the Icon showing "Occupied Status".

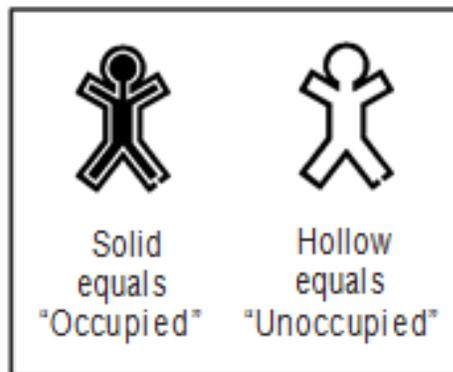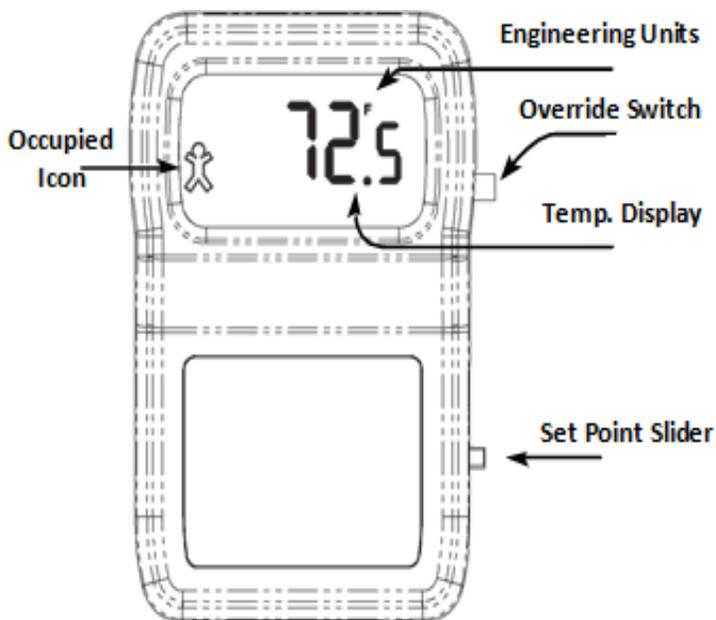

Specifications

Power :

9-40VDC (24VDC nominal) or

15-28 VAC (24 VAC nominal)

Note: AC power requires a separate pair of shielded wires

Power Consumption: .7 mA max DC; .17 VA max AC

Wiring: 22 to 14AWG

Mounting: Standard 2 x 4 box or drywall direct (Screws provided)

Outputs:

Passive Sensor..... Thermistor, Type II, 10K Ohm @ 77° F (25° C).

Set point Resistive, 10K Ohm potentiometer, reverse or direct acting

Inputs: Dry contact (24V, <1mA)

Occupied EXT OVR terminal "Grounded"

Unoccupied..... EXT OVR terminal "Open to Ground"

Display: LCD, Overall, 2"W x 1.1"H (Temp/Set point/Occupied)

LCD 3.5 Digits @0.6"H

Icon Filled is occupied, Hollow is Unoccupied.

Display Limits 1.0°, 0.5° and 0.1° (F/C) increments, Set points in 1° steps

Range -40 to 185°F (-40 to 85°C)

Display Setup Temp. & Set point, Temp. Only, or Set point Only

Options: Factory set options

Set point Slide potentiometer

Over ride Side button

Communication..... RJ45 Ethernet connector to external controller

Override Operation: Factory Set Momentary isolated contact

Setup Options:

Offset ±5°

Temp Display Display in °F or °C

Set point Disabled or Set point display only

Resolution..... Display in 1.0°, 0.5° or 0.1° increments

Environmental Ambient:

Temperature 32 to 122°F (0 to 50°C)

Humidity..... 0 to 95% RH

Non-cond. Storage.... 32 to 185°F (0 to 85°C)

Encl. Material: ABS Plastic, UL94V-0

Agency: RoHS, CE* (*Units with passive Thermistors are CE compliant.)

For Additional help in configuring this device, contact Accutrol at (203) 445-9991

Specifications subject to change without notice